



# Spare Part



## Mode List Slewing Ring for Imported Excavator

K o m a t s u							
1	PC30	14	PC120-6(4D102)	26	PC200-6(S6D102)(1)	38	PC300-6
2	PC40	15	PC130-7	27	PC200-6(S6D102)(2)	39	PC300-7
3	PC60-6(Z=76)	16	PC128UU	28	PC220-6(S6D95)	40	PC350-6
4	PC60-6(Z=80)	17	PC150-5	29	PC220-6(S6D102)	41	PC360-7
5	PC60-7(Z=76)	18	PC20HT	30	PC200-7(1)(Z=110)	42	PC400-3
6	PC60-7(Z=80)	19	PC200-1	31	PC200-7(2)(Z=92)	43	PC400-5
7	PC75U	20	PC200-2	32	PC220-7	44	PC400-6
8	PC90	21	PC200-3	33	PC228UU(1)	45	PC400-7
9	PC90-6	22	PC200-5	34	PC228UU(2)	46	PC450
10	PC100-5	23	PC220-3	35	PC300-2		
11	PC120-5	24	PC220-5	36	PC300-3		
12	PC120-6(4D95)	25	PC200-6(S6D95)	37	PC300-5		
H i t a c h i							
1	EX60-1	11	EX120-1	21	EX210-5	31	EX300-2
2	EX60-2	12	EX120-2	22	ZX200	32	EX300-3
3	EX60-3	13	EX120-3	23	ZX210	33	EX300-5
4	EX60-5	14	EX120-5	24	ZX200-3	34	ZX330
5	ZX60	15	ZX120	25	ZX225	35	ZX330-3
6	ZX70	16	ZX160	26	EX220-5	36	EX450
7	EX90	17	EX200-1	27	ZX230	37	ZX480
8	EX100-1	18	EX200-2	28	ZX240		
9	EX100-3	19	EX200-3	29	ZX270		
10	EX100-5	20	EX200-5	30	EX300-1		
K o b e l c o							
1	SK07-1	7	SK60	13	SK200-3	19	SK260-8
2	SK07-2	8	SK907B	14	SK200-5	20	SK300
3	SK07-1-N2粗	9	SK100	15	SK200-6	21	SK300-3
4	SK07-N2细	10	SK120-5	16	SK200-8	22	SK330-6E
5	SK03	11	SK200-1	17	SK210-8	23	SK350-8
6	SK09	12	SK200-2	18	SK230-6		
K a t o							
1	HD250-5	7	HD450-7	13	HD700-5	19	HD820-1
2	HD250-7	8	HD512	14	HD700-7	20	HD820-3
3	HD307	9	HD100	15	HD770SE	21	HD900-7
4	HD516	10	HD550-7	16	HD770-1	22	HD1023
5	HD400-7	11	HD700-1	17	HD770-2	23	HD1250-5
6	HD450-5	12	HD700-2	18	HD800-7	24	HD1430
C a r t e r p i l l a r							
1	CAT305.5	7	E120B	13	CAT320B	19	CAT325C
2	E70B	8	E180	14	CAT320C	20	CAT330C(1)
3	山东卡特60	9	E200B	15	CAT320D	21	CAT330C(2)
4	山东卡特80	10	CAT215	16	CAT320L	22	CAT330D
5	CAT307B	11	CAT215B	17	CAT322C	23	CAT345B
6	CAT307C	12	CAT225	18	CAT325	24	CAT345C