



# Spare Part



## Mode List Slewing Ring for Imported Excavator

S u m i t o m o							
1	SH60	8	SH200A2	15	SH225	22	SH300A2
2	SH120-1	9	SH200A3	16	SH240-3	23	SH340
3	SH120A1	10	SH200G3	17	SH240-5	24	SH350
4	SH120A2	11	SH200C3	18	SH260	25	SH430
5	SH120A3	12	SH200Z3	19	SH265	26	SH40T
6	SH120C3	13	SH210A3	20	SH280	27	SH580
7	SH200A1	14	SH220A1	21	SH300		
D o o s a n							
1	DH55	6	DH200-3	11	DH258-7	16	DH330-3
2	DH55-5	7	DH220-3	12	DH280	17	DH360-5
3	DH60-7	8	DH220-5	13	DH290	18	DH500
4	DH80-7	9	DH10L	14	DH300-5	19	DH370-7
5	DH150-7	10	DH225-7	15	DH320	20	DH200-5
H y u n d a i							
1	R55-7	8	R140	15	R215-7	22	R305-7
2	R60-5	9	R150W	16	R225-7	23	R320
3	R60-7	10	R170	17	R245	24	R335-7
4	R80-7	11	R200	18	R260-5	25	R360
5	R110-7	12	R210-3	19	R280	26	R450
6	R130-5	13	R220-5	20	R290	27	R455-7
7	R130-7	14	R210-9	21	R300	28	R210-5
S a m s u n g		L i e b h e r r		C a s e		V o l v o	
1	PS132	1	Liebherr 914	1	Case 210B	1	EC 55
2	PS210	2	Liebherr 924	2	Case 240 ( 1 )	2	EC 210
3	SE210	3	Liebherr 934B	3	Case 240 ( 2 )	3	EC 290
4	MX08-2	4	Liebherr 944	4	EC 290	4	EC 360
5	Samsung 280	K u b o t a		J C B			
6	Samsung 292	1	Kubota 50		JCB8056		

